


#7C-8102330-A 1948-52 Ford truck cowl vent seal installation

Adhesive Recommended

It is recommended to use a weather stripping adhesive to secure the cowl vent seal to the vent mechanism. Dennis Carpenter Ford Restoration Parts recommends 3M brand weather stripping adhesive. Our part # is COAZ-19554-A

Installing Cowl Vent Seal

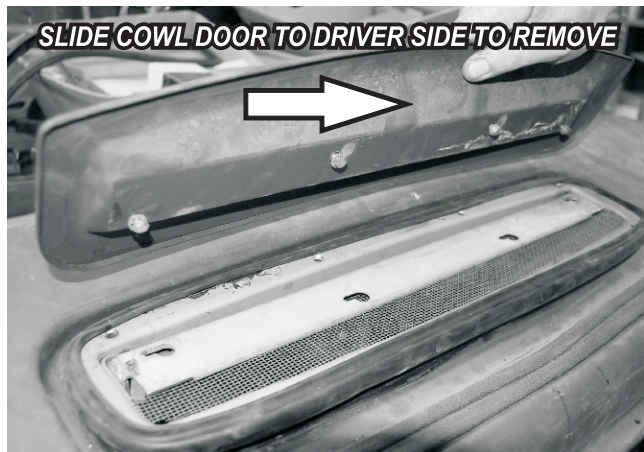

1. Loosen the 4 bolts that secure the cowl vent door to the cowl vent mechanism. The bolt holes on the cowl mechanism are slotted so slide the door towards the driver side to remove.


2. Remove the 8 screws that secure the vent mechanism to the cowl.

3. Lift the vent mechanism enough from the cowl to access the old vent seal and remove the seal.

4. Thoroughly clean the flange area on the mechanism of old adhesive and debris.




5. Apply weather stripping adhesive in several places within the groove on the cowl vent seal. This will hold the seal into place during reassembly.

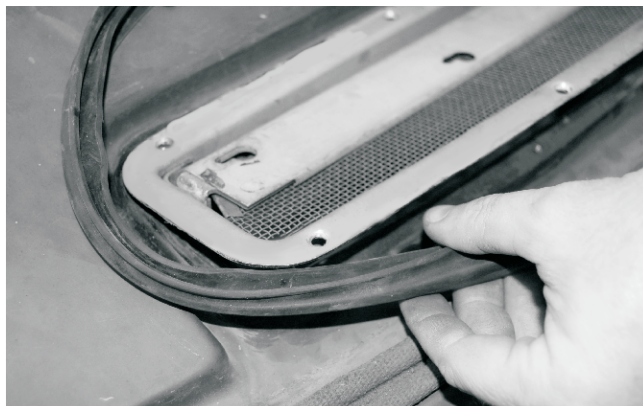

6. Have a helper raise the vent mechanism from inside the cab enough to allow the installation of the vent seal around the flange area of the mechanism.

7. Once the seal is in the proper position on the flange, use a pointed object such as an ice pick to punch holes into the vent seal through the 8 mounting holes of the vent mechanism to allow for screw access.

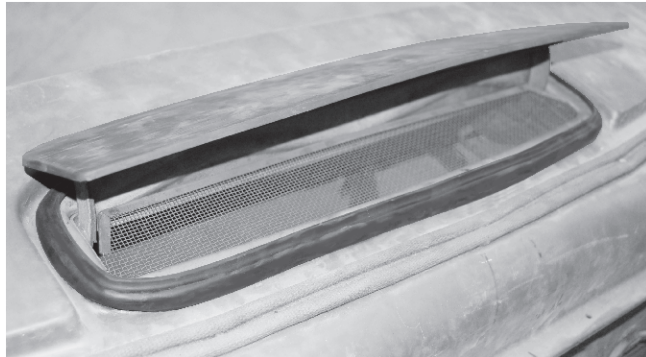

8. Reinstall the 8 vent mechanism screws then reattach the cowl vent door.



4140 Concord Parkway So., Concord, NC 28027
(704) 786-8139 email: info@dennis-carpenter.com
www.dennis-carpenter.com